



Image may differ from product. See technical specification for details.

729832 A

빠른 연결 니플

유압 펌프와 압력 호스를 적용 대상에 연결하기 위한 빠른 연결 니플입니다. 퀵 커넥트 니플은 다양한 최대 작동 압력에 사용할 수 있습니다. 펌프에 부착된 압력 호스에는 퀵 커넥트 커플링이 제공되어야 하며 적용면에는 일치하는 빠른 연결 니플이 배치되어야 합니다.

- 다양한 니플과 파이프를 수동으로 연결할 때보다 시간 절약, 적용 대상과 관련하여 펌프 위치를 더 자유롭게 지정 가능, 안전하고 안전한 연결, 펌프 연결 시 공기 제거 호스 필요 없음, 다양한 압력 등급 사용 가능.

개요

물류

제품 순 중량	0.08 kg
eClass 코드	23-05-19-01
UNSPSC 코드	27112908

호환 제품

Parent product

Hydraulic pump with large oil container	728619 E
유압 펌프	729124
Hydraulic Pump	729124 DU
Hydraulic nut for mounting or dismounting of bearings	HMV 100E
Hydraulic nut for mounting or dismounting of bearings	HMV 102E
Hydraulic nut for mounting or dismounting of bearings	HMV 104E
Hydraulic nut for mounting or dismounting of bearings	HMV 106E
Hydraulic nut for mounting or dismounting of bearings	HMV 108E
Hydraulic nut for mounting or dismounting of bearings	HMV 10E
Hydraulic nut for mounting or dismounting of bearings	HMV 110E
Hydraulic nut for mounting or dismounting of bearings	HMV 112E
Hydraulic nut for mounting or dismounting of bearings	HMV 114E
Hydraulic nut for mounting or dismounting of bearings	HMV 116E
Hydraulic nut for mounting or dismounting of bearings	HMV 11E
Hydraulic nut for mounting or dismounting of bearings	HMV 120E
Hydraulic nut for mounting or dismounting of bearings	HMV 126E
Hydraulic nut for mounting or dismounting of bearings	HMV 12E
Hydraulic nut for mounting or dismounting of bearings	HMV 130E
Hydraulic nut for mounting or dismounting of bearings	HMV 134E
Hydraulic nut for mounting or dismounting of bearings	HMV 138E

Hydraulic nut for mounting or dismounting of bearings	HMV 13E
Hydraulic nut for mounting or dismounting of bearings	HMV 142E
Hydraulic nut for mounting or dismounting of bearings	HMV 14E
Hydraulic nut for mounting or dismounting of bearings	HMV 150E
Hydraulic nut for mounting or dismounting of bearings	HMV 15E
Hydraulic nut for mounting or dismounting of bearings	HMV 160E
Hydraulic nut for mounting or dismounting of bearings	HMV 16E
Hydraulic nut for mounting or dismounting of bearings	HMV 170E
Hydraulic nut for mounting or dismounting of bearings	HMV 17E
Hydraulic nut for mounting or dismounting of bearings	HMV 180E
Hydraulic nut for mounting or dismounting of bearings	HMV 18E
Hydraulic nut for mounting or dismounting of bearings	HMV 190E
Hydraulic nut for mounting or dismounting of bearings	HMV 19E
Hydraulic nut for mounting or dismounting of bearings	HMV 200E
Hydraulic nut for mounting or dismounting of bearings	HMV 20E
Hydraulic nut for mounting or dismounting of bearings	HMV 21E
Hydraulic nut for mounting or dismounting of bearings	HMV 22E
Hydraulic nut for mounting or dismounting of bearings	HMV 23E
Hydraulic nut for mounting or dismounting of bearings	HMV 24E
Hydraulic nut for mounting or dismounting of bearings	HMV 25E
Hydraulic nut for mounting or dismounting of bearings	HMV 26E
Hydraulic nut for mounting or dismounting of bearings	HMV 27E
Hydraulic nut for mounting or dismounting of bearings	HMV 28E
Hydraulic nut for mounting or dismounting of bearings	HMV 29E
Hydraulic nut for mounting or dismounting of bearings	HMV 30E
Hydraulic nut for mounting or dismounting of bearings	HMV 31E
Hydraulic nut for mounting or dismounting of bearings	HMV 32E

Hydraulic nut for mounting or dismounting of bearings	HMV 33E
Hydraulic nut for mounting or dismounting of bearings	HMV 34E
Hydraulic nut for mounting or dismounting of bearings	HMV 36E
Hydraulic nut for mounting or dismounting of bearings	HMV 38E
Hydraulic nut for mounting or dismounting of bearings	HMV 40E
Hydraulic nut for mounting or dismounting of bearings	HMV 41E
Hydraulic nut for mounting or dismounting of bearings	HMV 42E
Hydraulic nut for mounting or dismounting of bearings	HMV 43E
Hydraulic nut for mounting or dismounting of bearings	HMV 44E
Hydraulic nut for mounting or dismounting of bearings	HMV 45E
Hydraulic nut for mounting or dismounting of bearings	HMV 46E
Hydraulic nut for mounting or dismounting of bearings	HMV 47E
Hydraulic nut for mounting or dismounting of bearings	HMV 48E
Hydraulic nut for mounting or dismounting of bearings	HMV 50E
Hydraulic nut for mounting or dismounting of bearings	HMV 52E
Hydraulic nut for mounting or dismounting of bearings	HMV 54E
Hydraulic nut for mounting or dismounting of bearings	HMV 56E
Hydraulic nut for mounting or dismounting of bearings	HMV 58E
Hydraulic nut for mounting or dismounting of bearings	HMV 60E
Hydraulic nut for mounting or dismounting of bearings	HMV 62E
Hydraulic nut for mounting or dismounting of bearings	HMV 64E
Hydraulic nut for mounting or dismounting of bearings	HMV 66E
Hydraulic nut for mounting or dismounting of bearings	HMV 68E
Hydraulic nut for mounting or dismounting of bearings	HMV 69E
Hydraulic nut for mounting or dismounting of bearings	HMV 70E
Hydraulic nut for mounting or dismounting of bearings	HMV 72E
Hydraulic nut for mounting or dismounting of bearings	HMV 73E

Hydraulic nut for mounting or dismounting of bearings	HMV 74E
Hydraulic nut for mounting or dismounting of bearings	HMV 76E
Hydraulic nut for mounting or dismounting of bearings	HMV 77E
Hydraulic nut for mounting or dismounting of bearings	HMV 80E
Hydraulic nut for mounting or dismounting of bearings	HMV 82E
Hydraulic nut for mounting or dismounting of bearings	HMV 84E
Hydraulic nut for mounting or dismounting of bearings	HMV 86E
Hydraulic nut for mounting or dismounting of bearings	HMV 88E
Hydraulic nut for mounting or dismounting of bearings	HMV 90E
Hydraulic nut for mounting or dismounting of bearings	HMV 92E
Hydraulic nut for mounting or dismounting of bearings	HMV 94E
Hydraulic nut for mounting or dismounting of bearings	HMV 96E
Hydraulic nut for mounting or dismounting of bearings	HMV 98E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 100E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 106E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 10E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 112E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 11E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 120E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 126E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 12E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 134E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 13E

Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 142E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 14E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 150E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 15E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 160E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 16E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 170E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 17E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 180E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 18E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 190E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 19E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 20E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 21E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 22E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 24E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 26E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 28E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 30E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 32E

Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 34E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 36E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 38E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 40E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 44E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 46E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 48E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 52E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 54E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 56E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 60E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 64E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 68E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 72E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 76E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 80E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 84E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 88E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 92E
Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 96E

Hydraulic nut for mounting or dismounting of bearings, with inch thread	HMVC 9E
SKF 공기 구동 유압 펌프 세트(30 MPa)	THAP 030E/SK1
Air-driven hydraulic pump set	THAP 150E/SK1
Hydraulic pump with large oil container	TMJL 100
Hydraulic Pump for the SKF Drive-up Method for small to medium size Hydraulic nuts	TMJL 100DU
Hydraulic pump with large oil container	TMJL 50
Hydraulic Pump for the SKF Drive-up Method for larger size Hydraulic nuts	TMJL 50DU

이용약관